

**XTRA SERIES**

KPL-G20130 (BLACK)

KPL-G10130 (WHITE)

**SPECIAL FEATURES**

- Medical and industry keyboard
- Scissor-switch design
- Integrated Clean mode for cleaning
- Integrated Trackball
- Flat key profile
- Excellent tactile feeling

**SPECIFICATION**

Number of keys:	83 (US/EU-Layout)	Operating temperature:	0°C ~ +40°C
Keyswitch technology:	Scissor mechanism	Storage temperature:	-40°C ~ +55°C
Switching cycles:	Approx. 5 mill. (per key)	Dimensions:	364.4 (L) x 133.4 (W) x 30.4 (T) mm
Housing material:	Plastic	Warranty:	2 years
Housing color:	White & black	Certification:	EN60601-1-2 Ed4, CE, FCC-ID EN301489-1-17+EN300328
Interfaces:	2.4Ghz wireless		
Optical trackball:	Dia. 22mm		
Weight:	590+/-10 g		


**ORDER INFORMATION**

Cat. No.	Trackball	2.4Ghz	Material	Color	Layout
KPL-G20130	✓	✓	Plastic	Black	US/DE/JP/KR/FR
KPL-G10130	✓	✓	Plastic	White	US/DE/JP/KR/FR

Other layouts, configurations and interfaces on request.



## TECHNICAL DRAWING (IN MM)

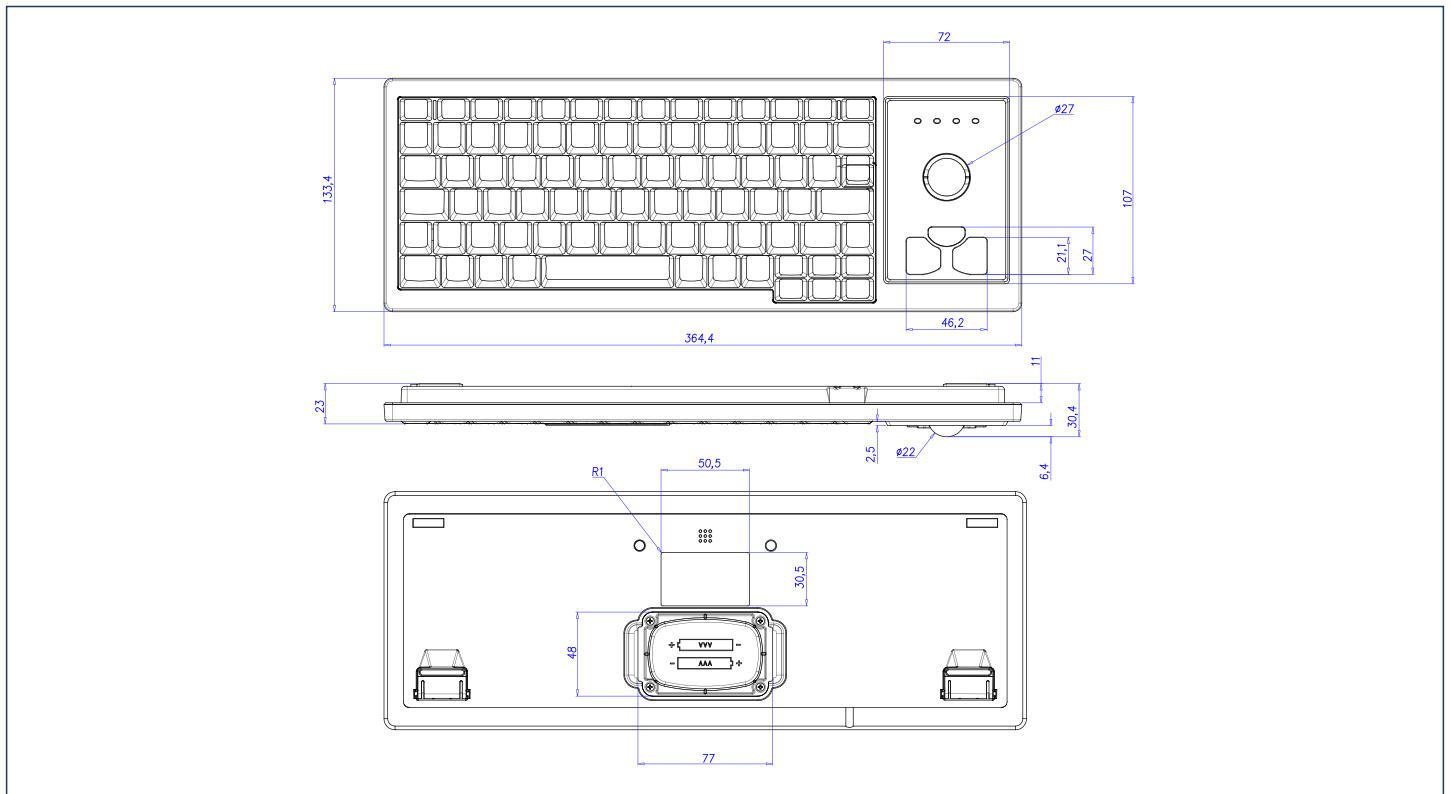

## EN60601-1-2 Ed 4

EN60601-1-2 Ed 4 applies to the basic safety and essential performance of Medical Equipment (ME) equipment and ME systems in the presence of electromagnetic disturbances and to electromagnetic disturbances emitted by ME equipment and Me systems.

## SHORT OPERATING INSTRUCTIONS

## CLEAN MODE

Press Fn and F5 to enable clean mode. Clean mode is indicated by the three Lock-LEDs flashing.

## WIRELESS LEDS INDICATE

Press Fn, you can see the green Power-led on,

- 1) If the status Num lock on, it means, the led on
  - 2) If the status Caps lock on, it means, the led on
  - 3) If the status Scroll lock on, it means, the led on
- power saving mode design

## CLEANING INSTRUCTION

For further details please refer to below link:

<https://gett-group.com/en/gett-service/cleaning-and-material-resistances>